

NOTE TO INSTALLER

REMOVAL AND INSTALLATION OF PUSH ROD

FOR BENDIX HYDROMAX

1. **Hold push rod in vise** using caution to **NOT** damage threads or rod if applicable.
2. **Using a soft faced hammer**, stick the face of the housing unit with a forceful blow while pulling unit away from vise, parallel to push rod.
3. **Be sure Activating Pin is in place before moving to Step Four.**
4. **Installing push rod in replacement unit:** insert new grommet into groove of push rod and push in piston. **DO NOT USE HAMMER TO PUSH ROD DOWN.**

NOTE: ATTN: INSTALLER

Please ensure that the check ball and retainer are installed properly between the motor and hypower. **FAILURE TO DO SO WILL CAUSE A HARD PEDAL.**

